
### PLEASE READ THE INSTRUCTIONS BEFORE OPERATING THIS PRODUCT

# OPERATION INSTRUCTIONS

#### **BLIND OPERATION**

**To tilt blind:** Twist the wand to tilt the slats in either direction.

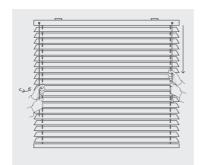

Tilt blind horizontal before raising/lowering to extend the life of the blind.

**To lower blind:** Move lift cord towards middle of the blind pulling down gently until cord lock releases.

**To raise blind:** Pull lift cord downward until blind reaches desired height.

**To lock cords:** Pull lift cord towards the outside of the blind and release. Cord will lock automatically.

#### **MAINTENANCE**

The product is maintenance free however we recommend that regular visual checks are completed to ensure that no components have been damaged, which could result in operating difficulties and/or cause a safety risk.

If any maintenance is required we recommend that the work is carried out immediately, by a reputable blind company.








# WARNING

Young children can be strangled by loops in pull cords, chains, tapes and inner cords that operate the product.

To avoid strangulation and entanglement, keep cords out of the reach of young children. Cords may become wrapped around a child's neck. Move beds, cots and furniture away from window covering cords.

Do not tie cords together. Make sure cords do not twist and create a loop.

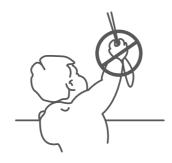



FREE HANGING PERFECT FIT BLINDS

#### YOU SHOULD HAVE

#### PERFECT FIT ITEM LIST

Perfect Fit frame and blind



**Brackets** 



Safety device



8 x Corner cap screws (2 per corner



#### **TOOLS REQUIRED**

Screwdriver



NOTE: for blinds with frame, the wand will always be attached to the back of the side sections of the frame. For blinds without a frame, the wand will be inside the head rail of the blind.

Sunwood: when the wand is wider than the blind, the wand will be sent as a separate package.

The installation of this product should be conducted by someone competent in DIY.

#### STEP 1

TOGETHER


1.1

## STEP 2


# PUT THE FRAME

Lay all parts of the frame/ blind out face down on a clean even surface. Next unwrap the cords.

Your blind will be attached to the top section of the frame. Corner joints will be preattached to the top & bottom sections of the frame.

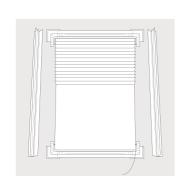

Starting from the left hand side, securely push the frame Place the card as shown. section into the corner joints, starting at the top. Repeat for the right hand side.

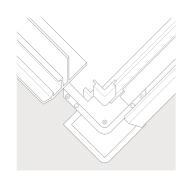

1.3


Your Perfect fit frame and blind are ready to fit.

#### ATTACH THE **BRACKETS**


2.1

Press the flat edge of the bracket underneath the window seal. Bracket should be placed with the small tab facing outwards.

Align the brackets with the holes in the frame.

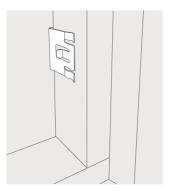

A credit/debit card can be used as a template to align the top and bottom holes.

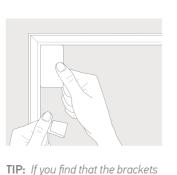

are difficult to place behind the window seal, you can use a some washing up liquid as lubricant on the flat part of the bracket. Once all the brackets are fitted, clean any excess from the window surface.

Blinds over 1100mm drop will have an additional punch hole, centered between the top and bottom holes. Align the additional brackets accordingly.

#### STEP 3


& BLIND TO THE

# ATTACH THE FRAME

WINDOW

3.1

Line up the holes in the Perfect Fit frame withthe brackets.

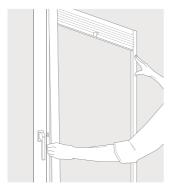

3.2

Firmly press the frame onto each bracket one side at a



Your frame and blind are now installed.

#### SAFETY DEVICE

STEP 4

Cord safety cleat - The safety cleat shall be installed as close to the headrail as possible and in all cases not less than 1500mm from the floor.


The Cord must be fully accumulated around the safety cleat(s) when the blind is not in use.

Use the table below to determine the distance required between the cleats to fully accumulate the cords when the blind is fully raised.


Drop of Blind	*Distance between cord cleats (centre to centre)
1-1000mm	100mm
1001-2000mm	150mm
2001-3000mm	300mm

Place the safety cleat in the desired position on the wall and mark the positions of the holes with a pencil.

(Note: Based on cord up to 2.8mm, 17mm can be accumulated in total.)

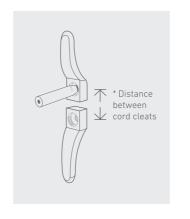


Use suitable screws to attach the safety cleat to the wall.

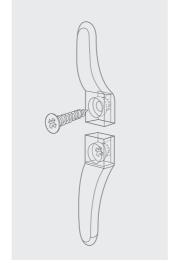

Wrap the cords around the cord cleats in a figure of 8.

When the cords are fully accumulated ensure they are secure so when any cord is pulled no excess cord is released.

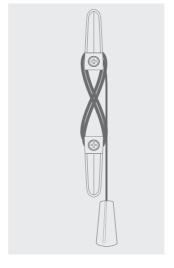

# BREAKAWAY SAFETY TASSEL


Breakaway safety tassel is pre-fitted to the lift cords so that when a horizontal force is applied to the cords entering the condenser it safely breaks away eliminating any hazardous loops.



If the breakaway safety tassel is pulled apart:

Untangle and untwist cords.

For 2 cords: Press the breakaway safety tassel together until it is fully closed.

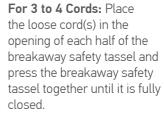

FITTING INSTRUCTIONS: FREE HANGING PERFECT FIT BLINDS

If there are any doubts that the breakaway safety tassel has not been re-attached correctly it can tested by placing your arm between the cords and pressing downwards. The breakaway safety tassel should break apart with minimal force, if it does not breakaway tie cords out of reach of children and contact a reputable blind company to repair the blind.



